

Printer Reset Instructions

- Turn the printer off (small black switch on side).
- Hold in the blue circular button on the front panel of the printer.
- Turn the printer back on while holding in the blue circular button.
- When the amber DRUM light is lit by itself, let go of the blue circular button.
- Hold in the blue circular button on the front panel again.
- Once the red ALARM light comes on, let go of the blue circular button.
- This completes the factory reset on the printer.

Toner Replacement Instructions

- Replace the toner cartridge when the red ALARM light and amber DATA lights are illuminated simultaneously and blinking.